ASSEMBLY INSTRUCTION:
Power Block Installation
MODELS:
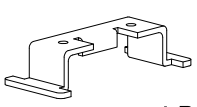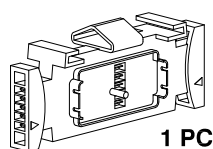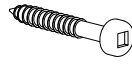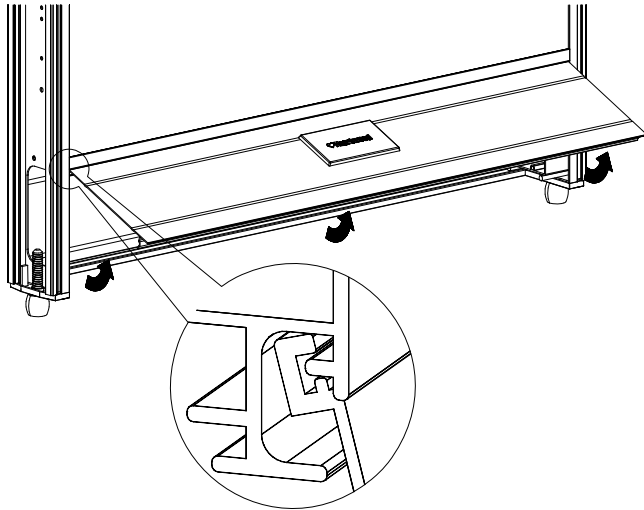
PANELS:

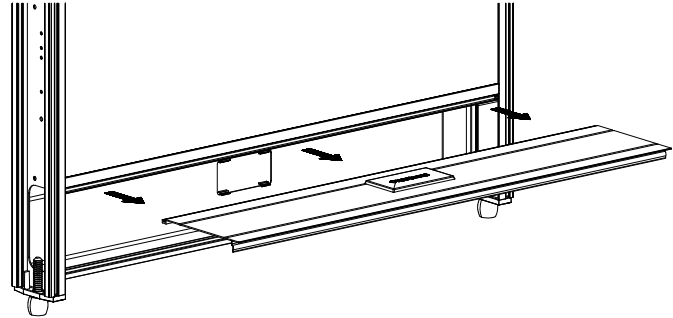|	
FRM-2466P	FRM-2448P
FRM-3066P	FRM-3048P
FRM-3666P	FRM-3648P
FRM-4266P	FRM-4248P
FRM-4866P	FRM-4848P
FRM-6066P	FRM-2466GP
FRM-6666P	FRM-3066GP
FRM-7266P	FRM-3666GP

CAUTION:
OFFICE FURNITURE IS HEAVY. ENSURE THAT YOU HAVE ADEQUATE ASSISTANCE WHEN LIFTING AND MOVING PARTS AND ASSEMBLIES. KEEP HARDWARE OUT OF REACH OF CHILDREN

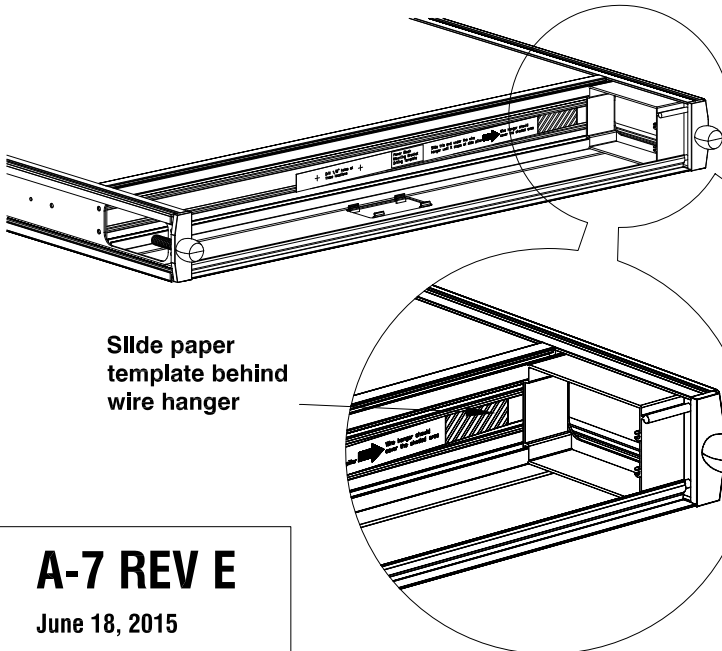| MOUNTING BRACKET	POWER BLOCK	#8 X 1 $\frac{1}{4}$" SCREW	PAPER TEMPLATE
1 PCS	1 PCS	2 PCS	1 PCS

1. To remove the panel raceway cover twist the bottom away from panel.

2. Pull raceway cover straight out to remove.

4. Drill marked holes with $\frac{1}{8}$" drill bit.

3. Push the paper template under the rectangle wire hanger until it stops at the panel.

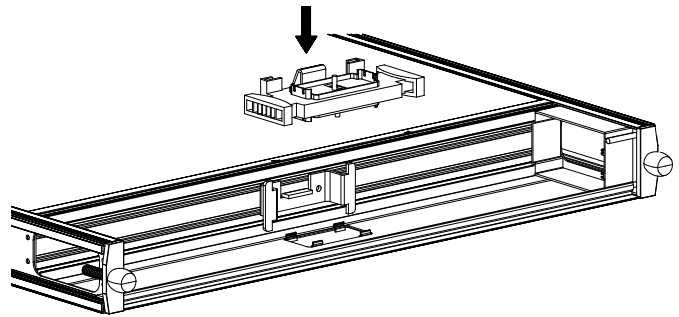Drill 1/8" holes at these locations
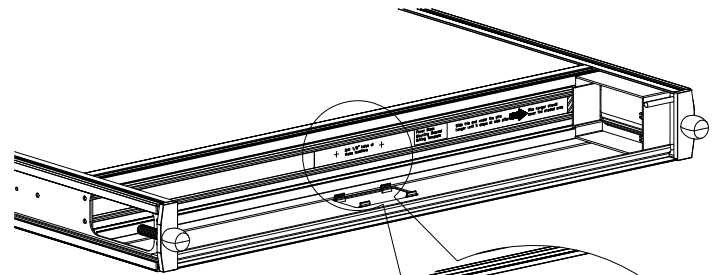
Slide paper template behind wire hanger

Wire hanger should cover the shaded area.
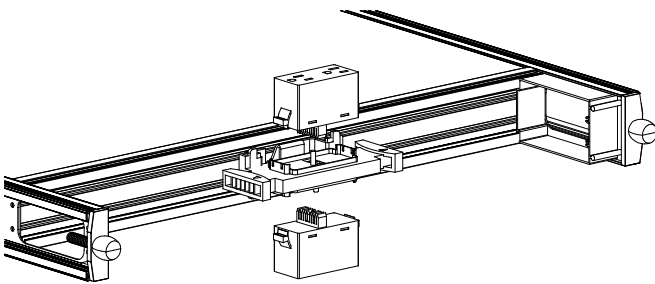
A-7 REV E
June 18, 2015

5. Attach the mounting bracket to the panel with the #8 x 1 $\frac{1}{4}$" screws provided.
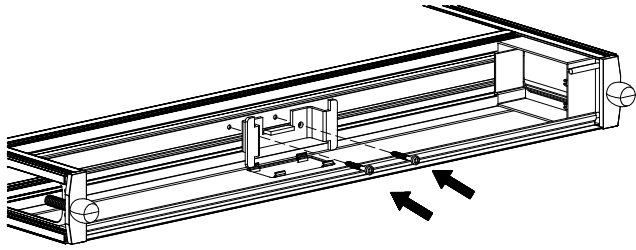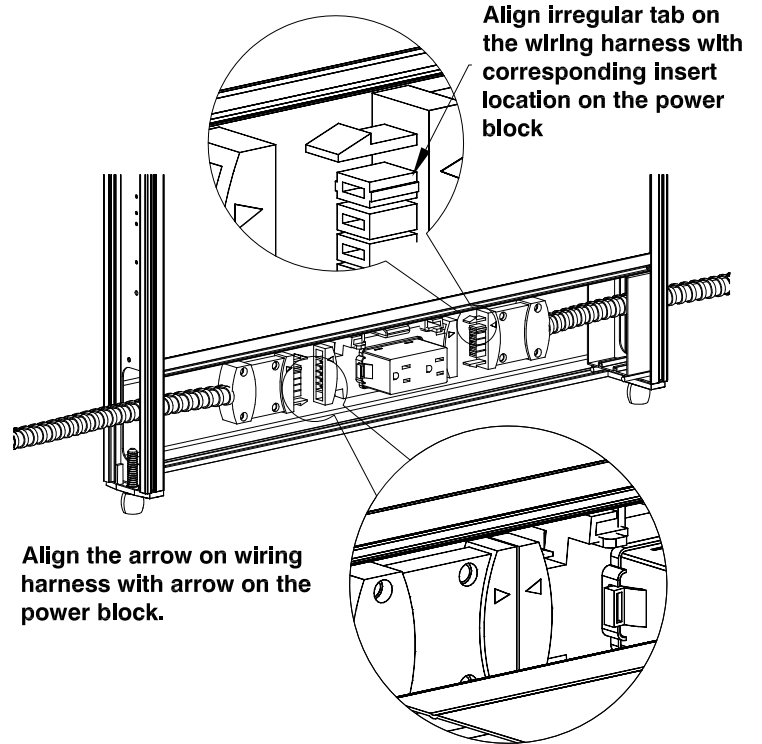

6. Slide the power block into the mounting bracket until it snaps in place.
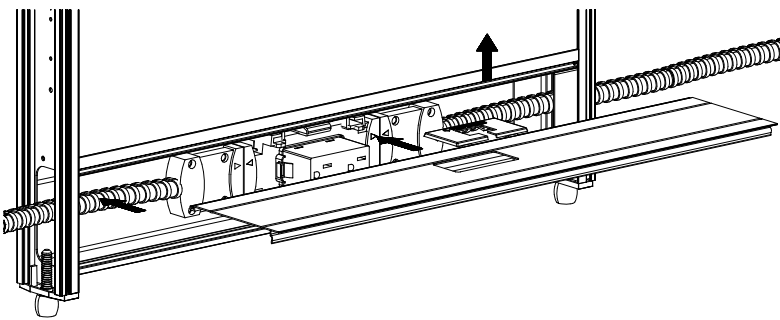

7. Attach required duplex receptacles to the power block. Duplex receptacles can be installed on both sides of the power block.
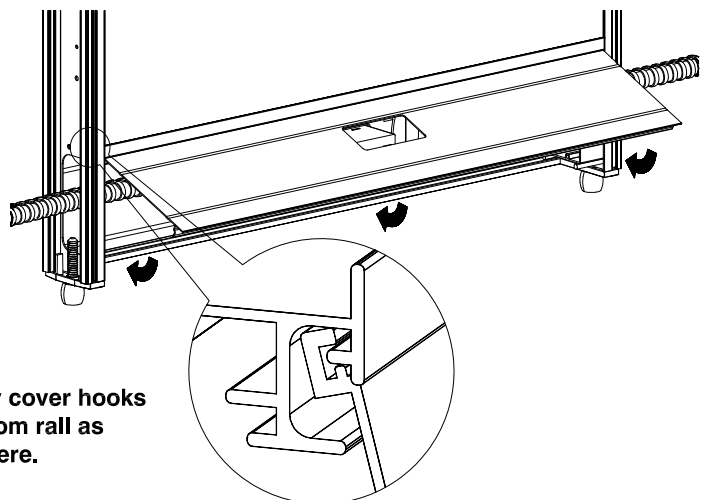

8. Attach required wiring harnesses to the power block.

Align irregular tab on the wiring harness with corresponding insert location on the power block

Align the arrow on wiring harness with arrow on the power block.

9. Remove grommet cover and push raceway cover straight in to attach.

10. Hook top of raceway cover into bottom rail. (See detail below.) Twist bottom of raceway cover towards panel.

Raceway cover hooks into bottom rail as shown here.

A-7 REV E

June 18, 2015